Honda Civic Type R Intercooler Installation Instructions

Tools Required:

Flat headed screw driver
Phillips screw driver
10mm Hose clamp drive
10mm and 12mm socket with suitable wrench and extensions
10mm spanner

1. Remove the clips from the slam panel cover and remove.

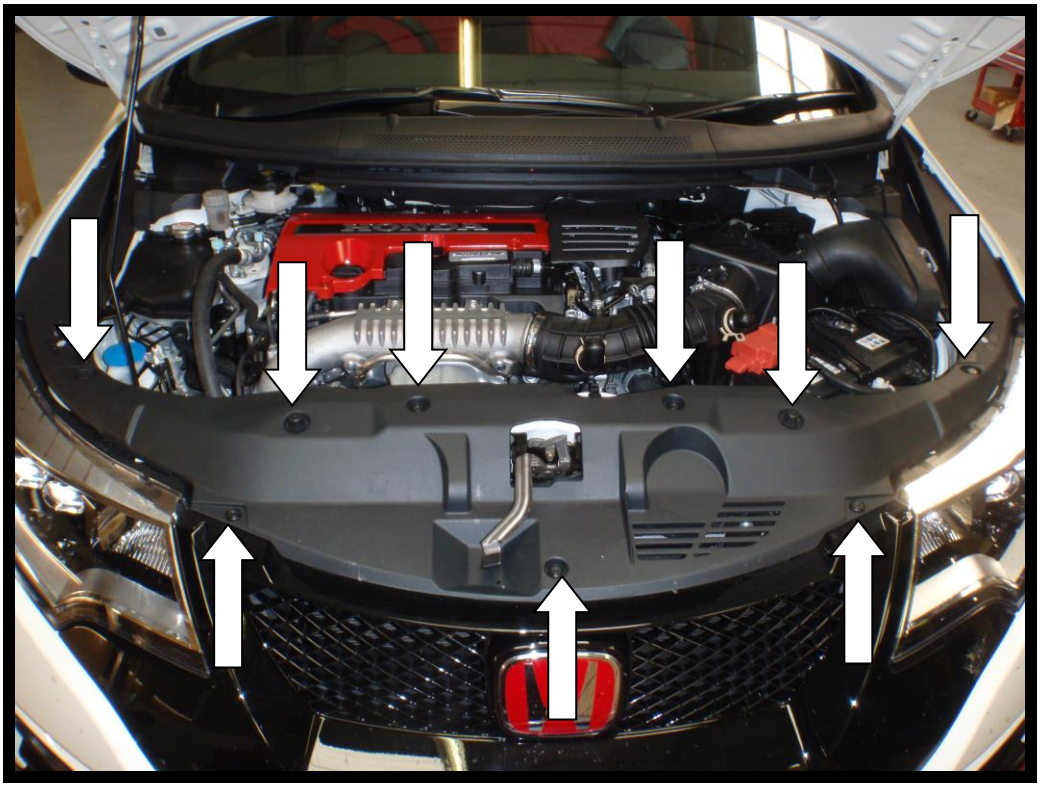

2. Remove the screws and plastic clip from both arch liners.

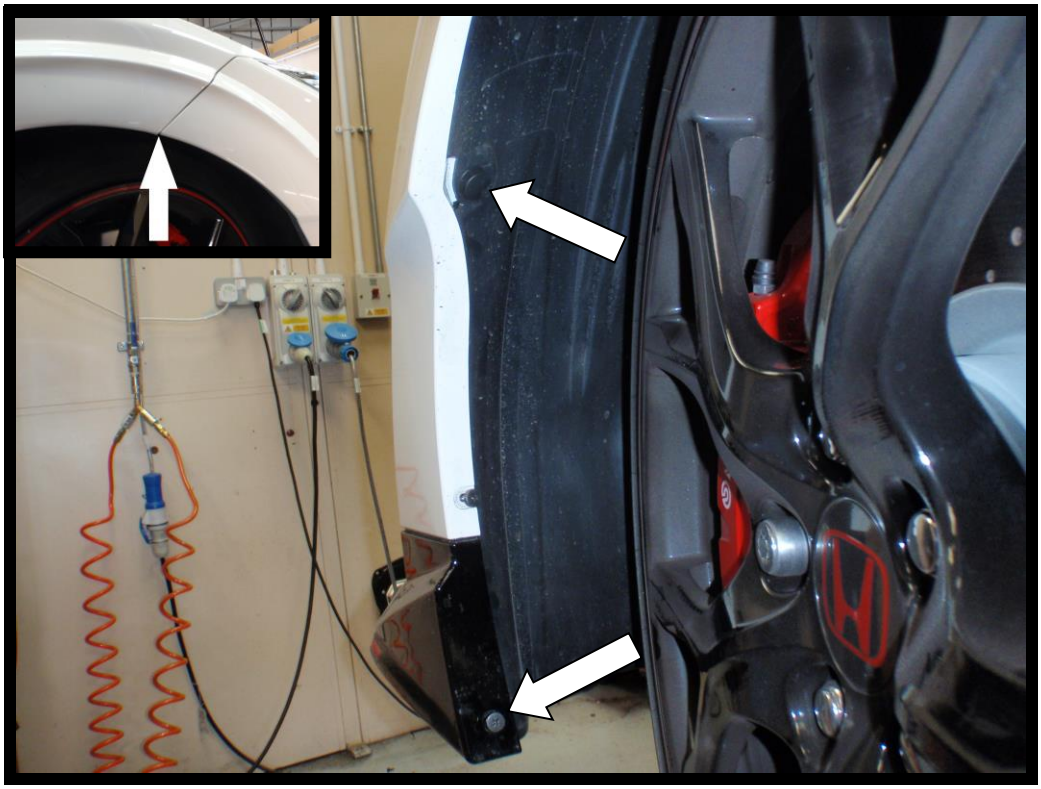

3. Remove all of the plastic clips from the edge of the under tray.

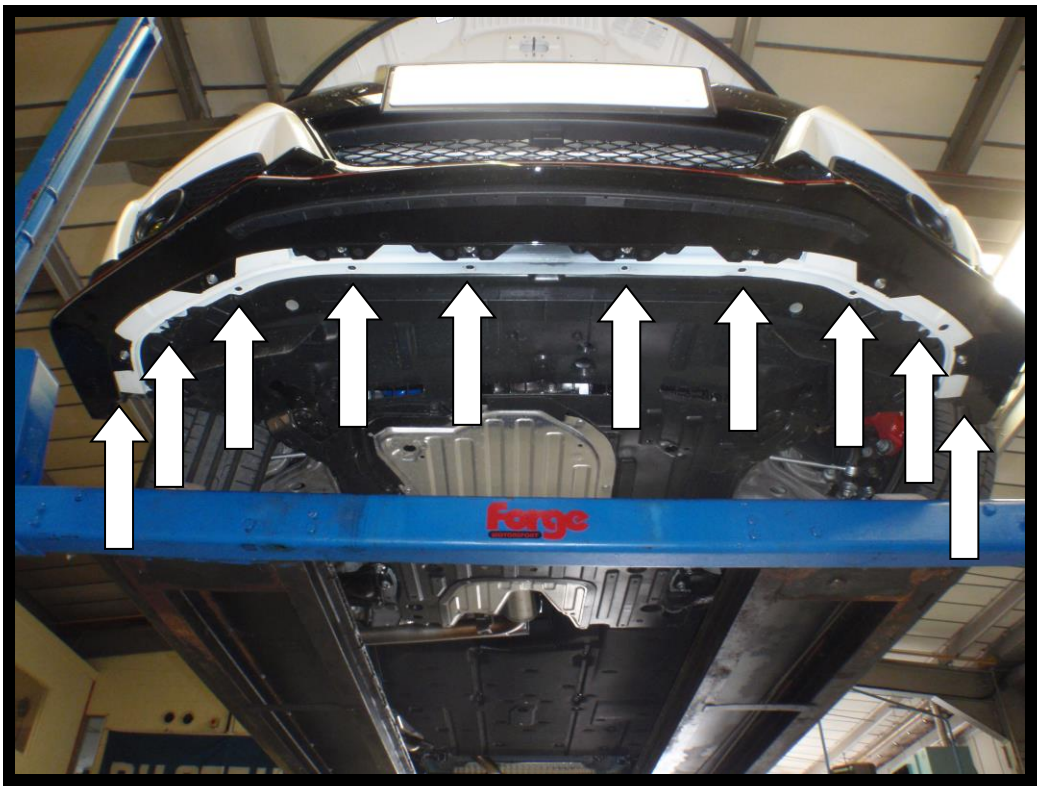

4. Pull the bumper out from the wing and the head light. Take care of the arch as it is only attached with double sided tape and can easily detach from the bumper.

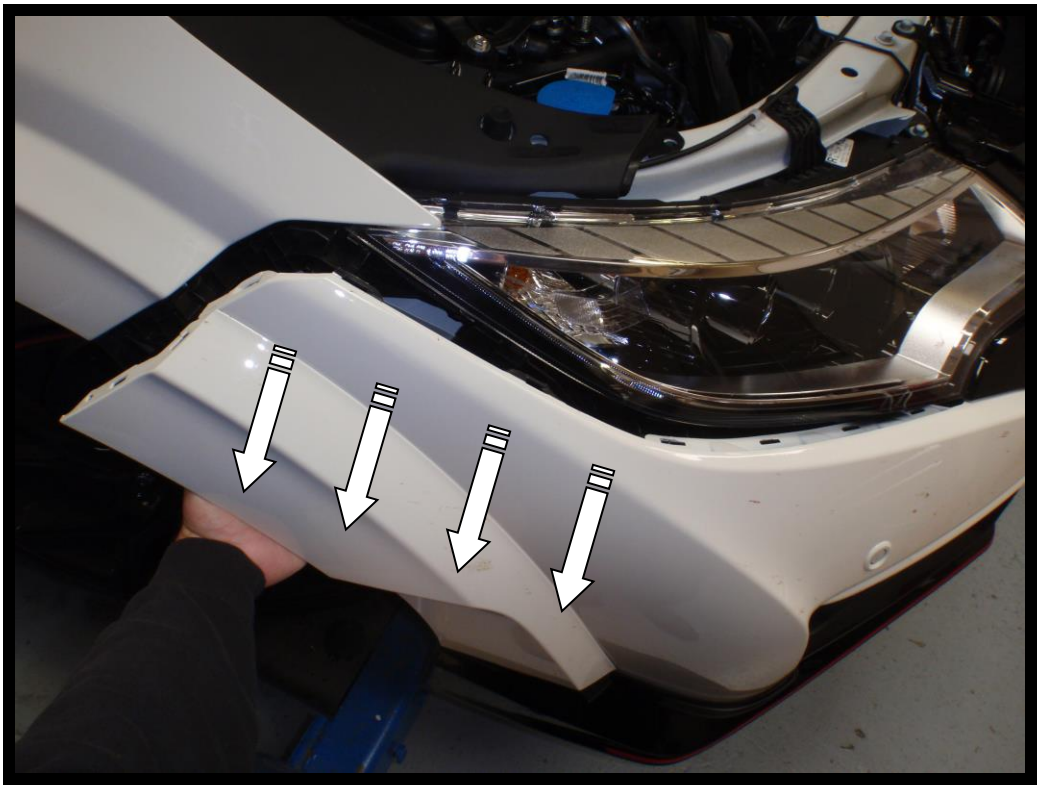

5. With the sides of the bumper pulled out unclip the spot lights on both sides and parking sensors.

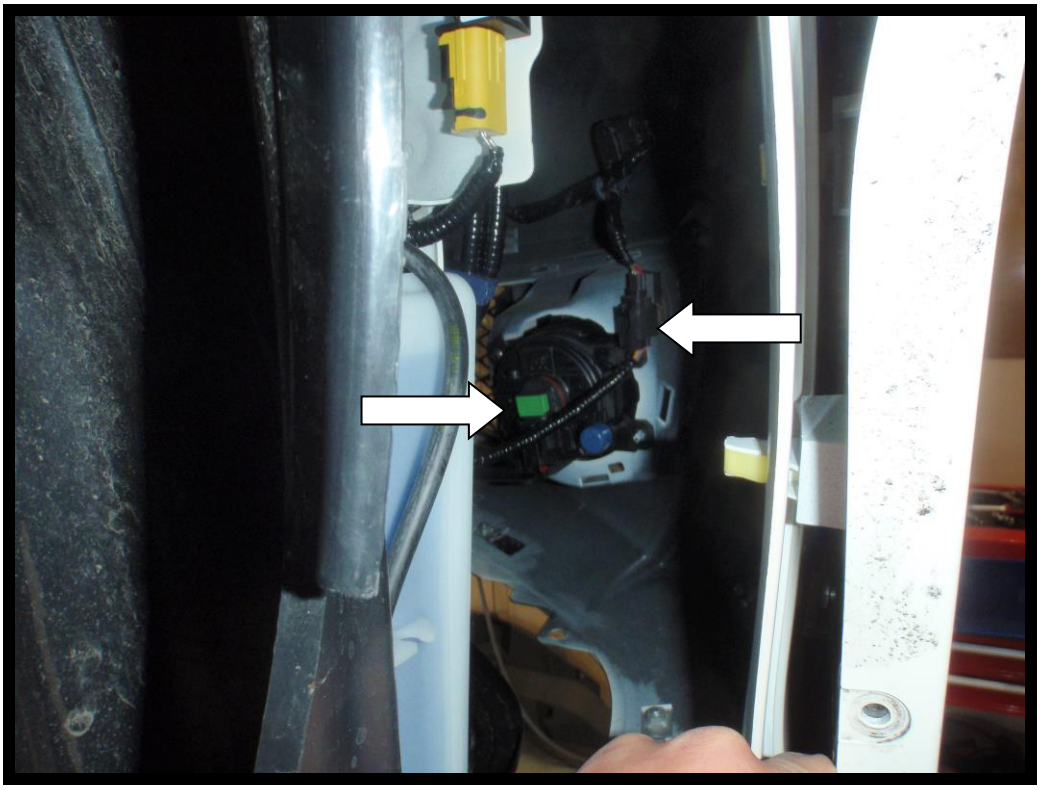

6. Remove the two bolts at the front of the bumper, the bumper is now free to remove.

7. Unclip the rubber ducting and remove.

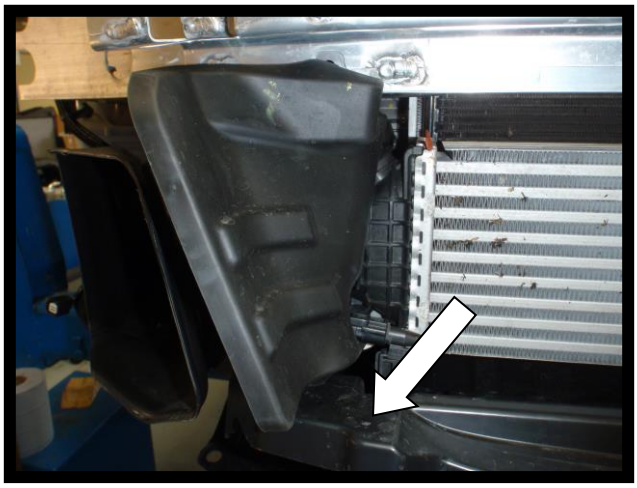

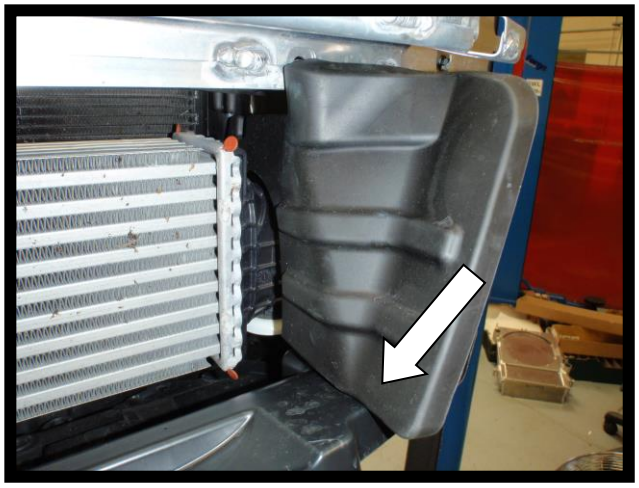

8. Unclip the air temperature sensor and the two clips on the wiring.

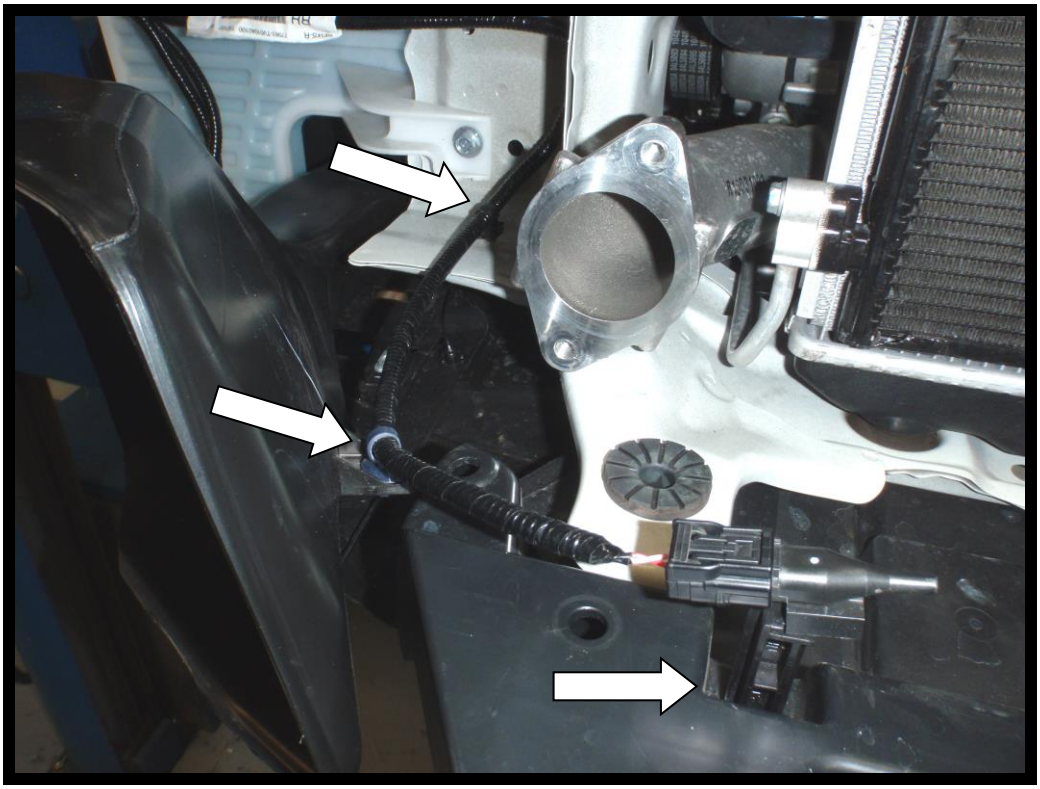

9. Remove the 12mm bolts and undo the hose clip, remove the 10mm bolts from the brackets and remove the intercooler.

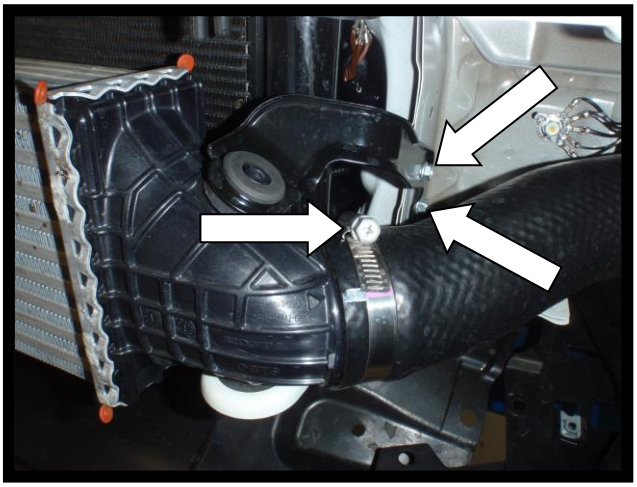

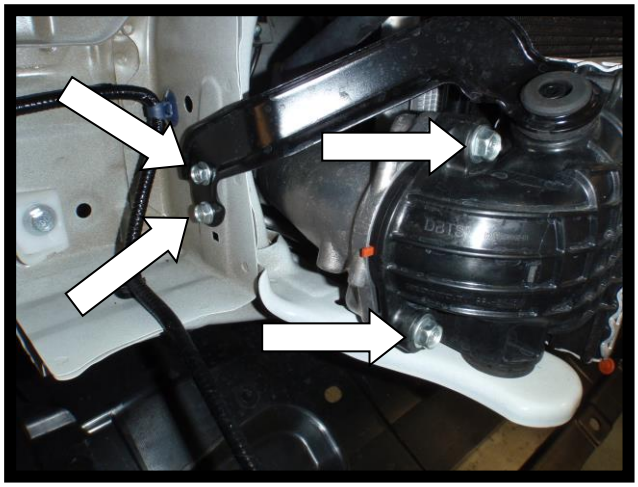

10. Remove the O-ring from the OEM intercooler and install into the new intercooler.

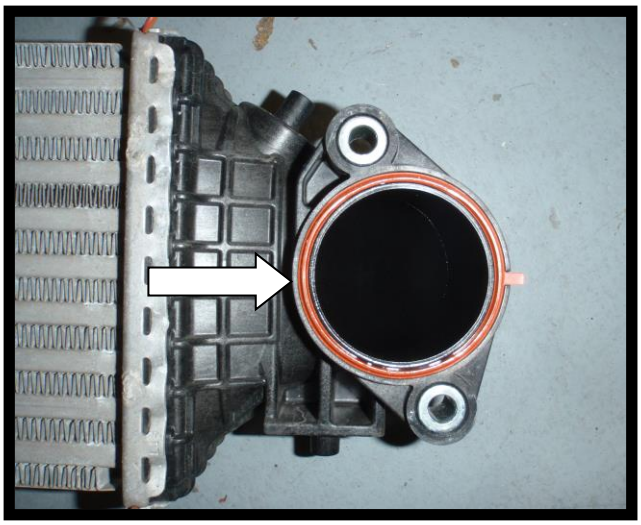

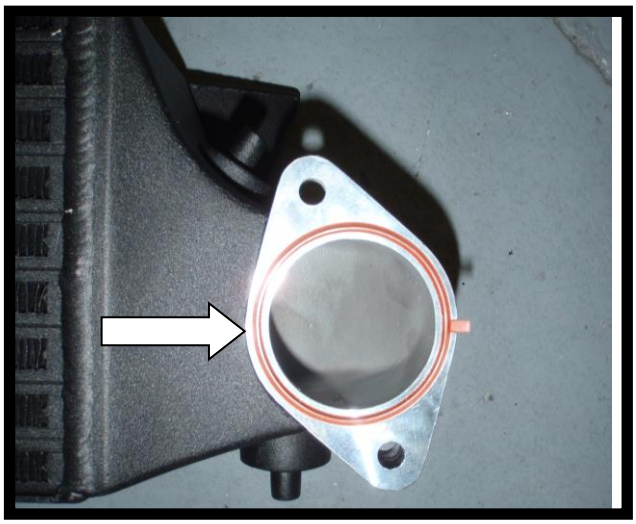

11. Remove the 12mm bolts and remove the crash bar.

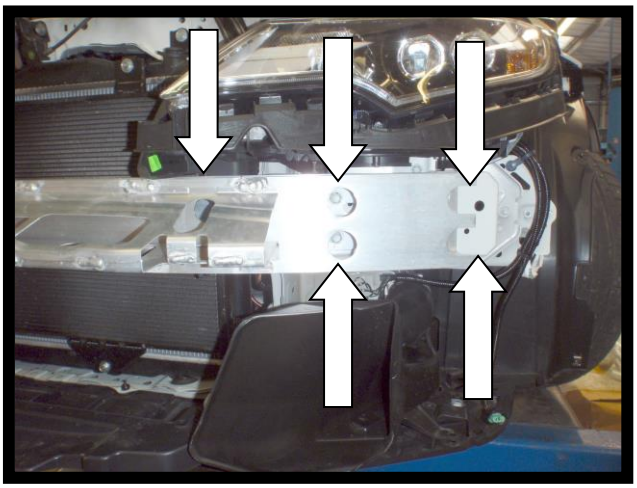

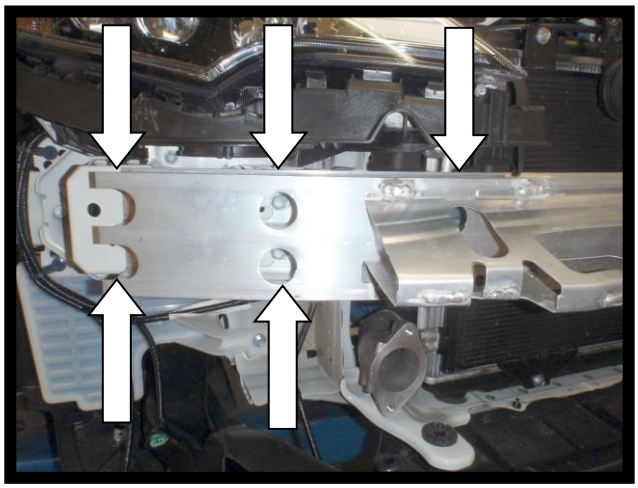

12. Install the new intercooler in reverse order of the removal of the OEM intercooler. Refit the air temperature sensor into the small square hole in the intercooler ducting.

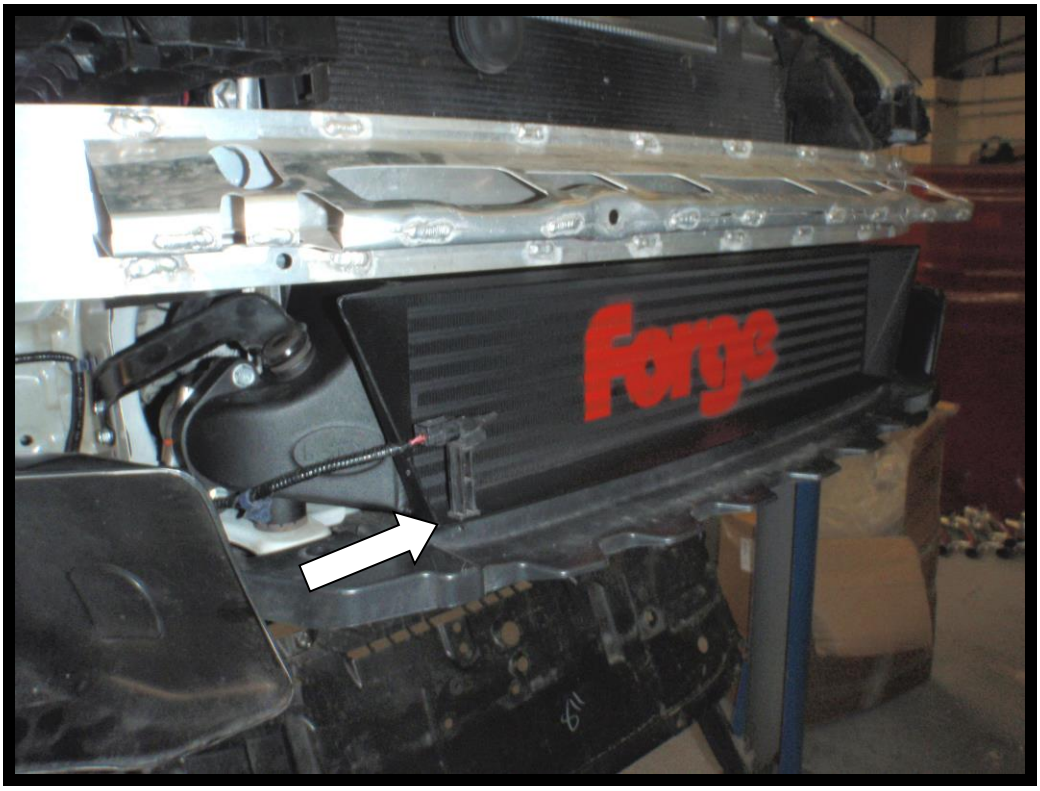

Installation is now complete! Refit all other parts following steps 1-11 in reverse order.

Engineered for performance

Forge MOTORSPORT