



## Hyundai Veloster Intake Fitting Instructions




### Tools Needed:

7mm Clamp Driver  
10mm 8mm Spanner/Socket  
Flat Bladed Screw Driver  
Phillips screw driver


It is advised that the cold air ducting is used in conjunction with the intake. However this will only fit with the forge motorsport intercooler and possibly other aftermarket intercoolers.

Please contact your local forge dealer or visit [www.forgemotorsport.co.uk](http://www.forgemotorsport.co.uk) and [www.forgemotorsport.com](http://www.forgemotorsport.com) if you do not have this item.

1. Undo the four clips on the intake hose.

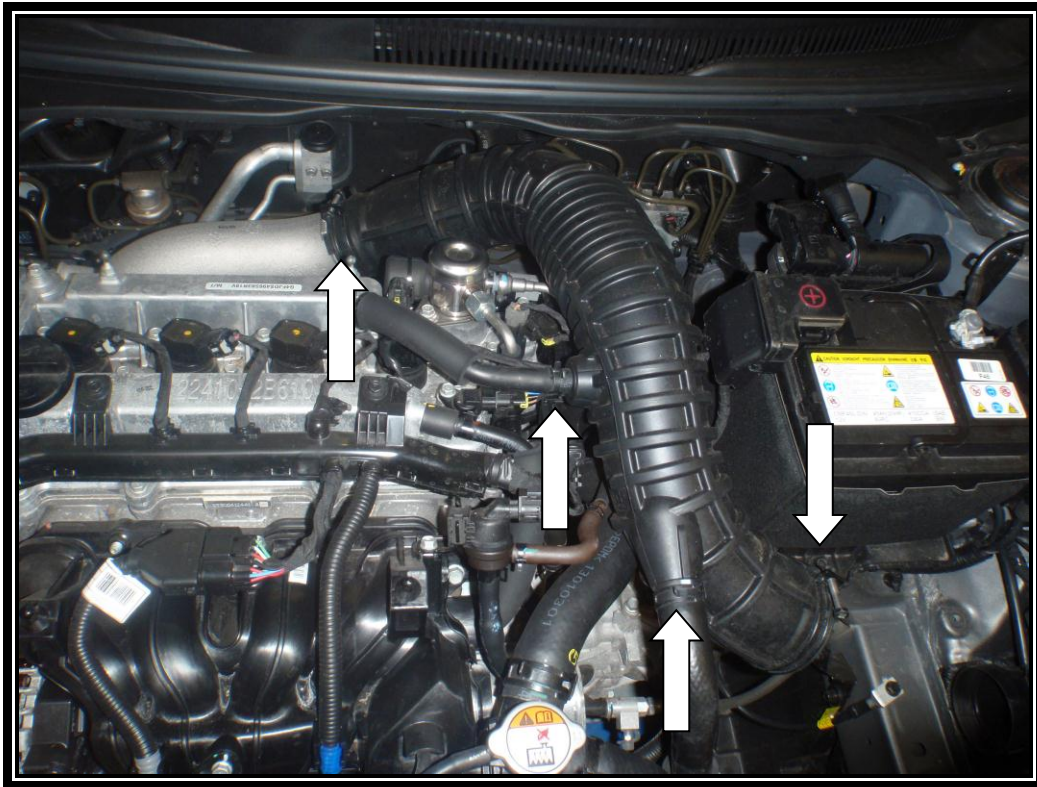


2. Push out the plastic clips and unclip the filter cover. Remove the filter cover, filter and cold air feed.

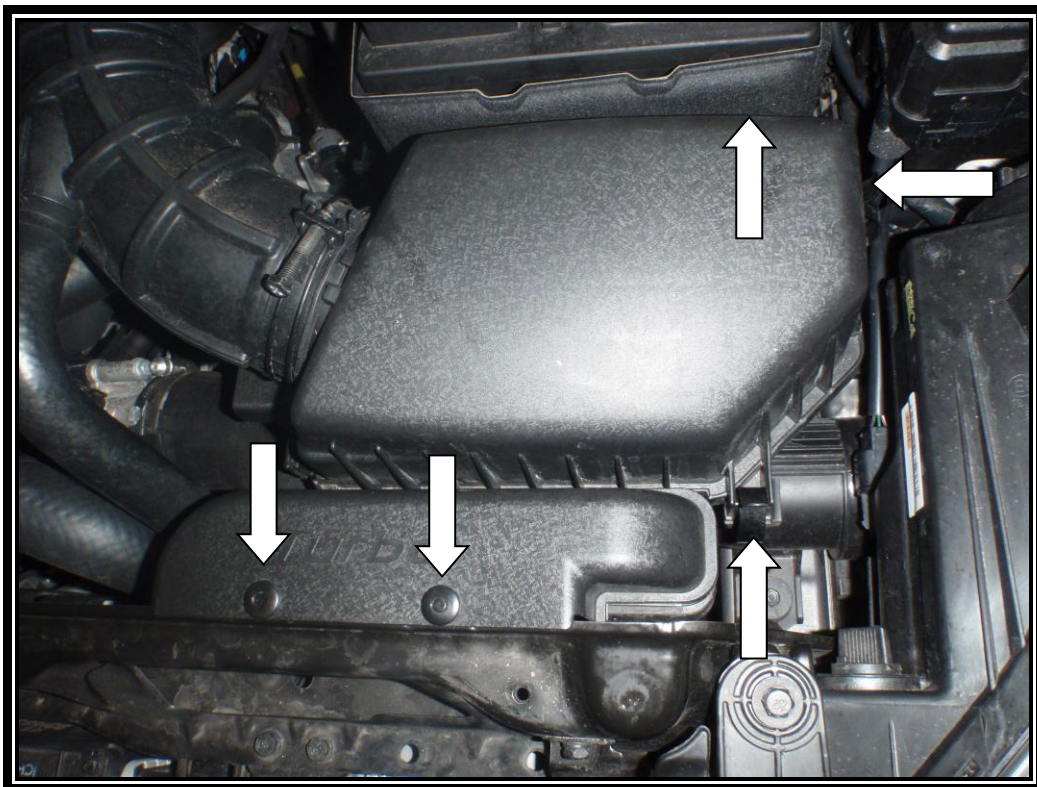




3. Undo the two bolts holding the filter box and remove. At this step the forge motorsport filter can be fitted however, if you wish to remove the rest of the Hyundai filter in the lower bumper or install the forge motorsport cold air ducting follow steps 5 to 11 and 13 to 14 to remove the bumper.

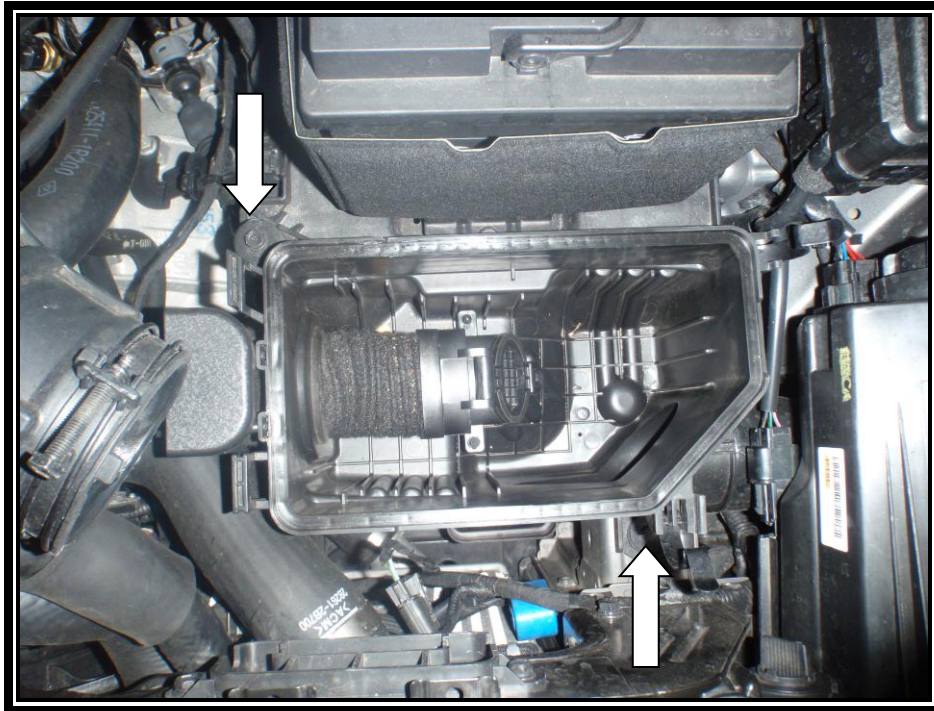


4. Install the aluminium pipe with the filter attached using the coupler and hose clamps supplied in the kit. When fitting insure there is adequate space around the battery etc. Attach the breather and dump valve recirculating hose or blank off with the blanking hose also supplied in the kit.

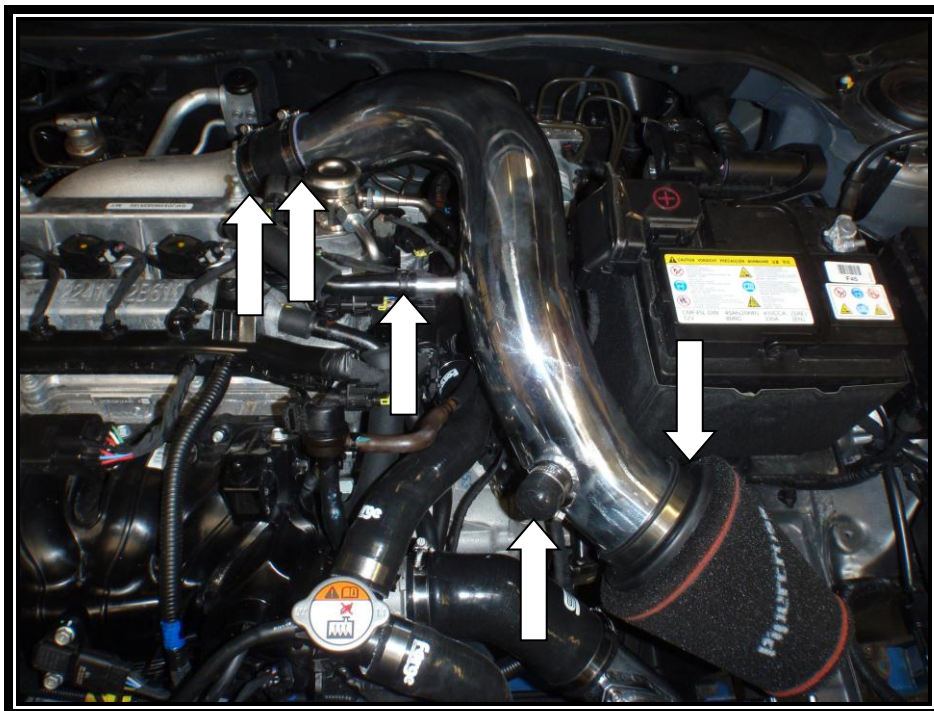

5. To remove the rest of the filter undo the 10mm screw in the arch liner and remove.



6. Using a phillips screw driver undo and remove the plastic clips on the bottom edges of the bumper.

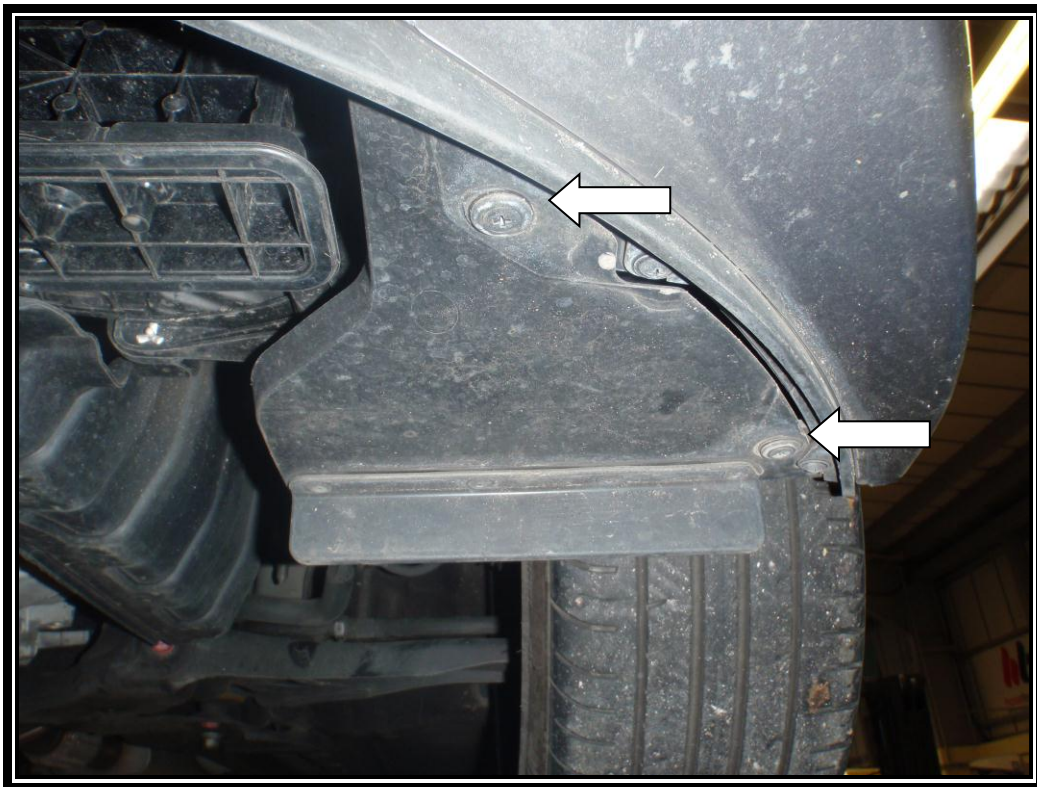





7. Pull the arch liner down and disconnect the lights.



8. Undo the three bolts under the front bumper

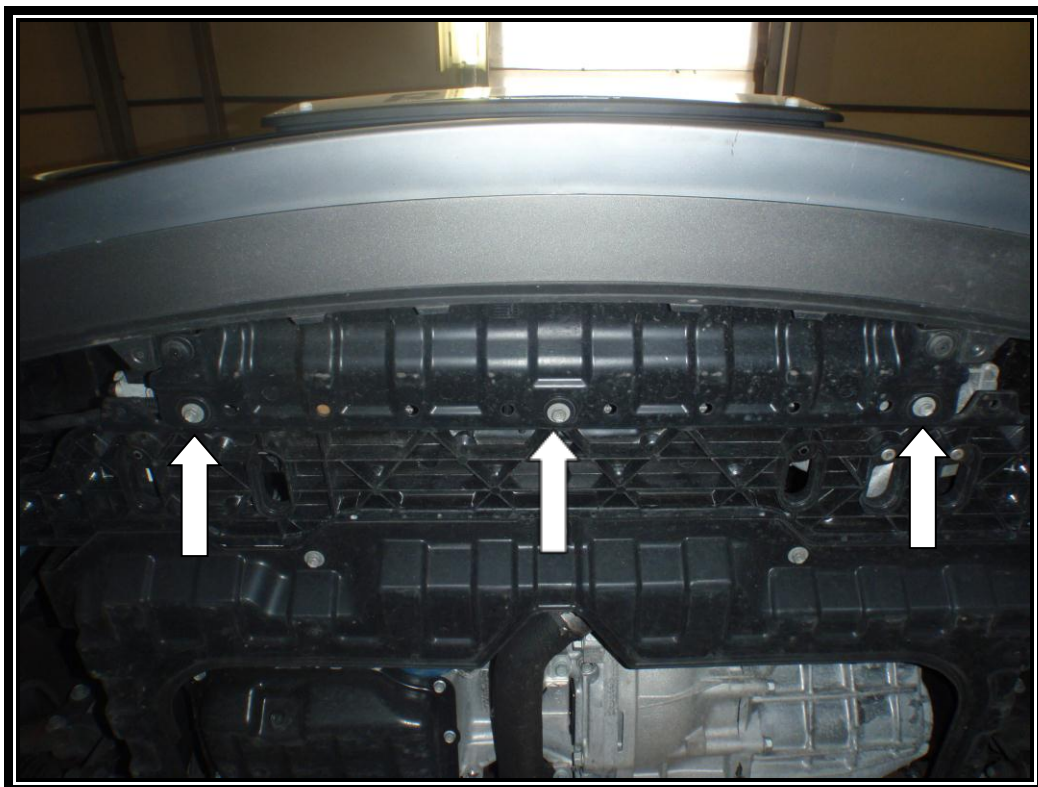

9. Undo the four bolts and unscrew the plastic clips.

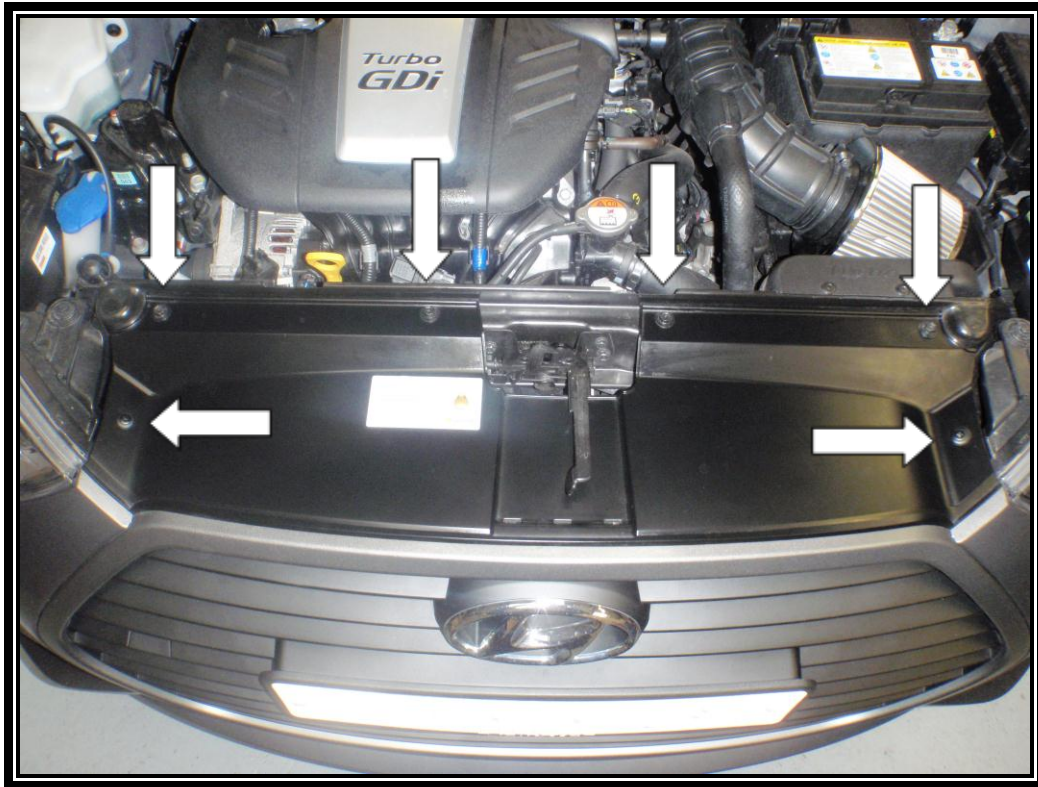


10. Unclip the bumper from the wing and under the light and remove the bumper.







11. Undo the two bolts on the resonator box, from inside the engine bay there is one more bolt that needs to be undone and remove the resonator box.

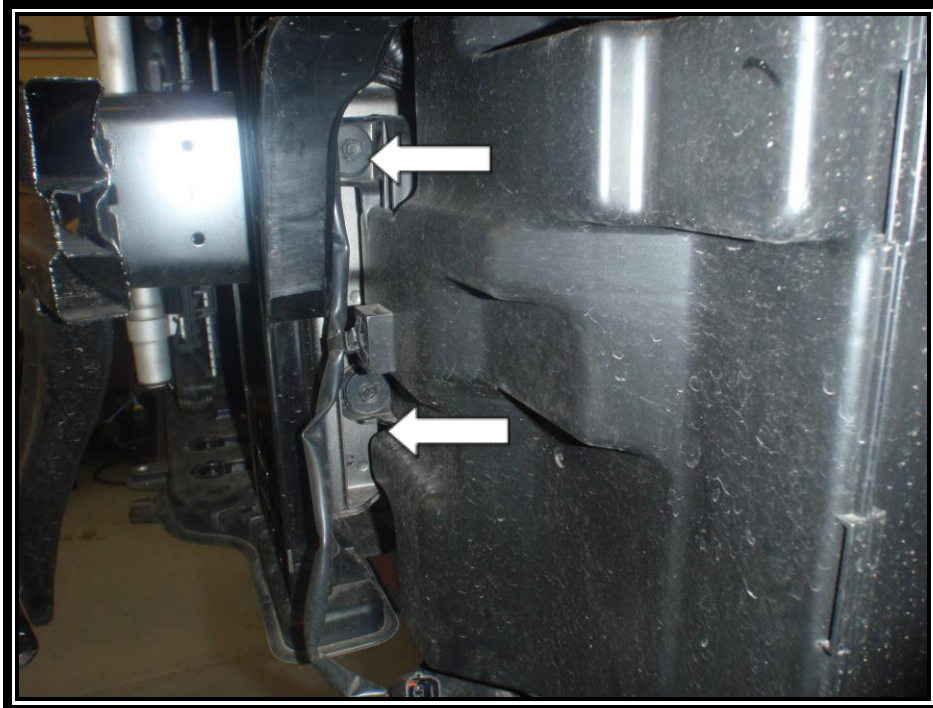

12. Your filter is now completely removed if you are fitting the ducting continue with steps 13 to 14, or reattach the bumper in reverse order following steps 5 to 11.
13. To install the cold air ducting use the existing holes in the slam panel and bolt in the top. Using the self-tapping screws supplied attach the bottom part of the ducting to the crash bar. The self-tapping screws can drill through the crash bar but it is advised to pre drill holes with a 4mm drill.

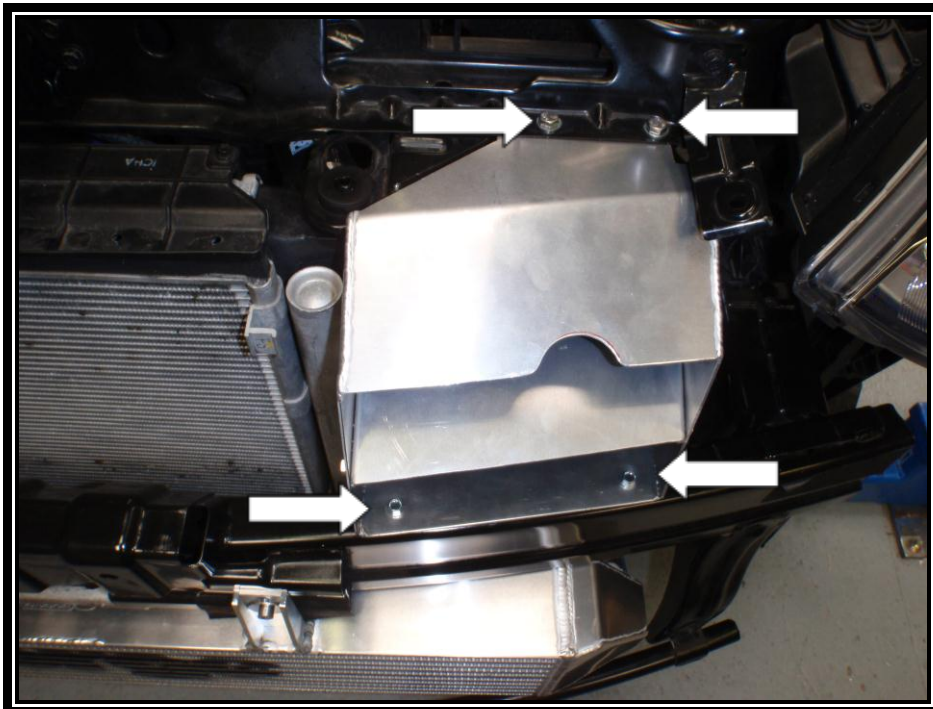

14. The foam part of the bumper will need to be trimmed unclip it from the bumper and offer it up to the crash bar. Mark were it needs to be trimmed and cut it with a sharp knife.

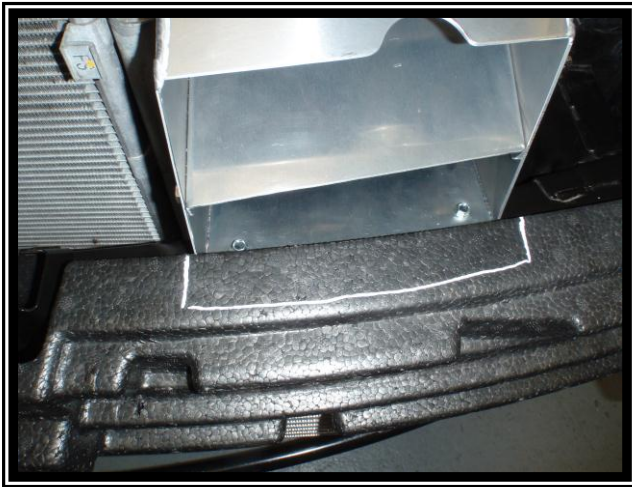

Please contact your nearest Forge Motorsport distributor for our other products for the Hyundai Veloster, or visit our website [www.forgemotorsport.co.uk](http://www.forgemotorsport.co.uk) and [www.forgemotorsport.com](http://www.forgemotorsport.com)

**ENGINEERED FOR PERFORMANCE**

