




2015 Onwards Audi RS3 Boost Tap Instructions

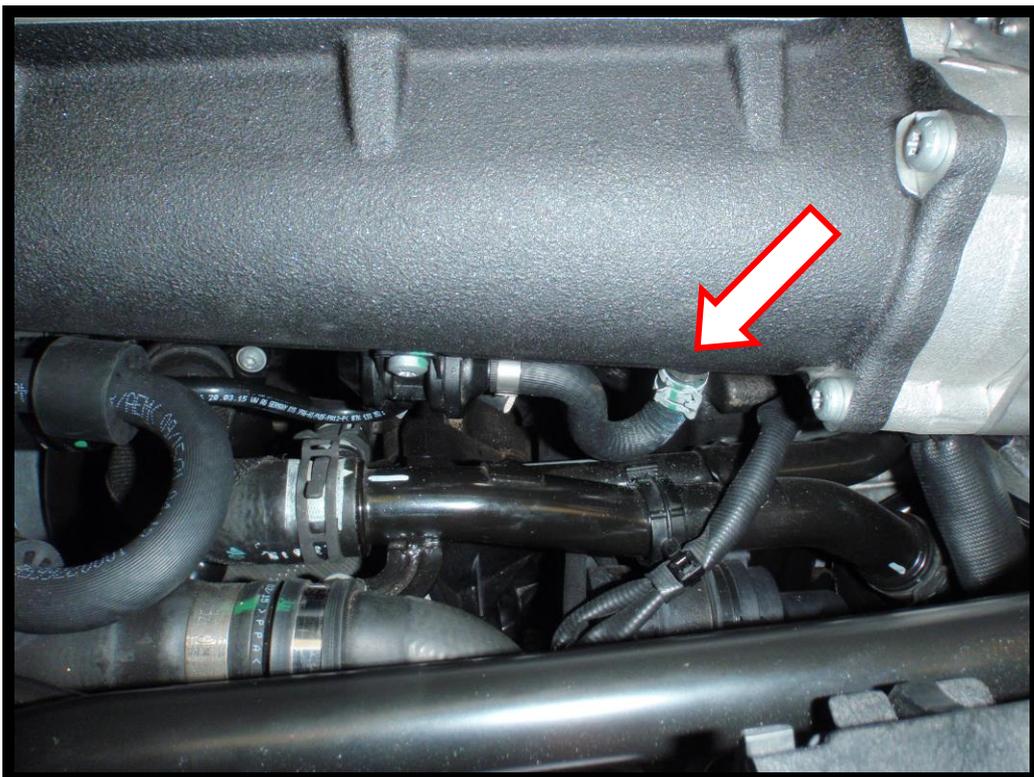

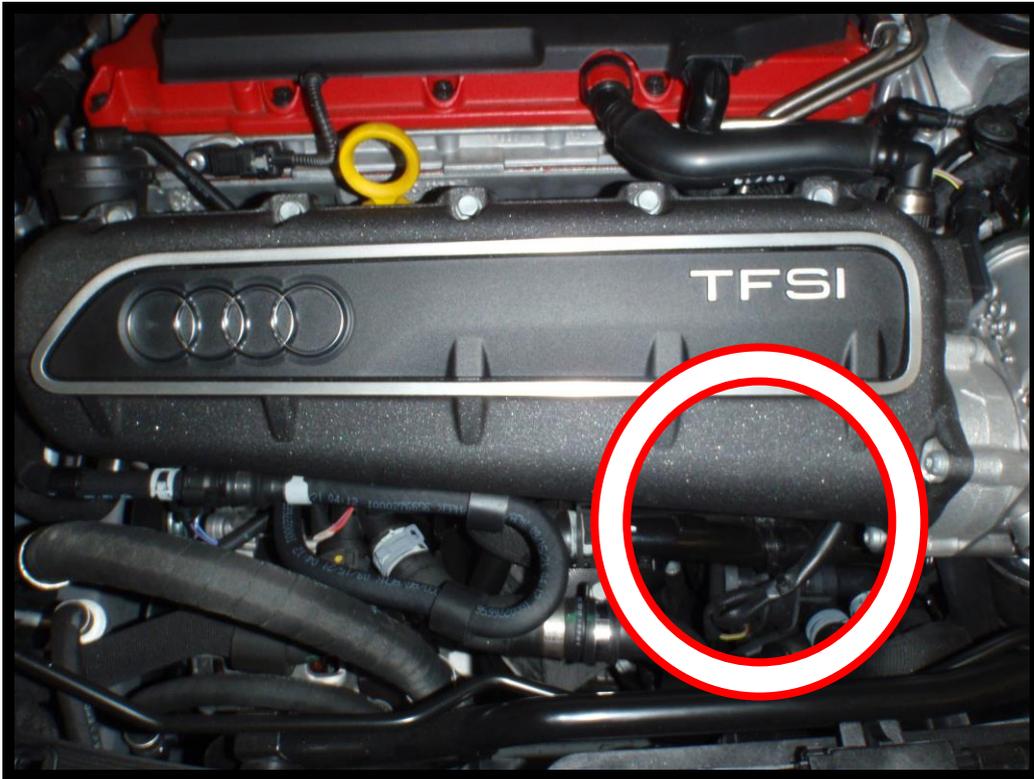

1. Remove the vacuum hose as indicated above, unscrew the vacuum pipe and screw in the new pipe with the washers and banjo take off.

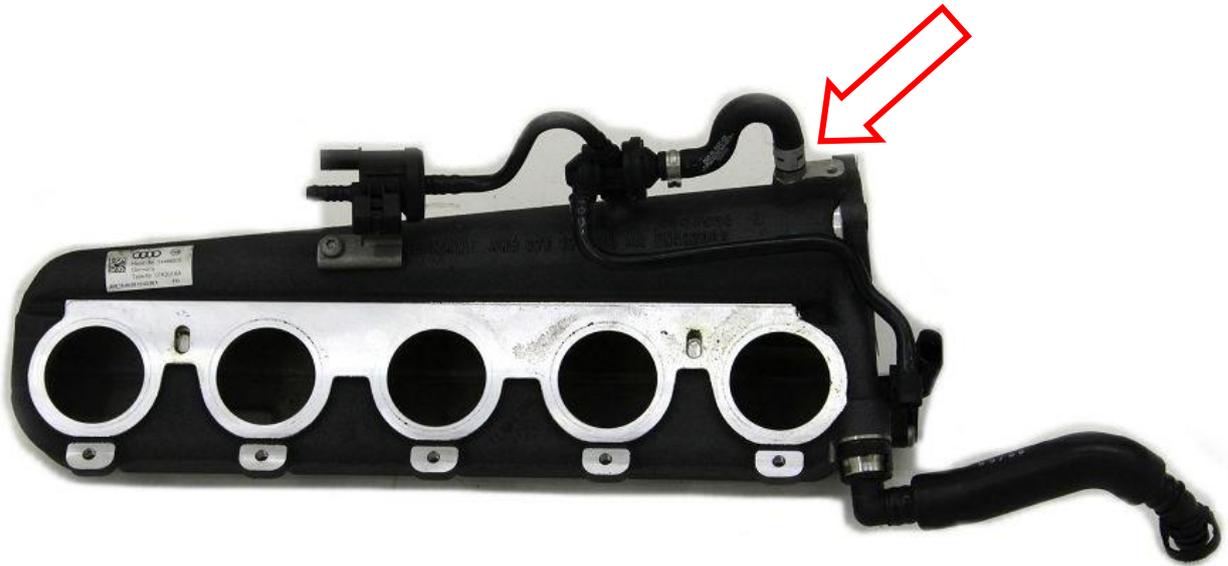

ENGINEERED FOR PERFORMANCE