



Mini Countryman Intake Installation



Tools needed:


7mm Hose Clamp Drive

T30 Torx

T25 Torx

Philips Screwdriver

1. Open the bonnet and start by removing the two T30 Torx holding the air mass sensor to the air box. It's easier my temporarily removing the plug/wiring from the sensor to do this.

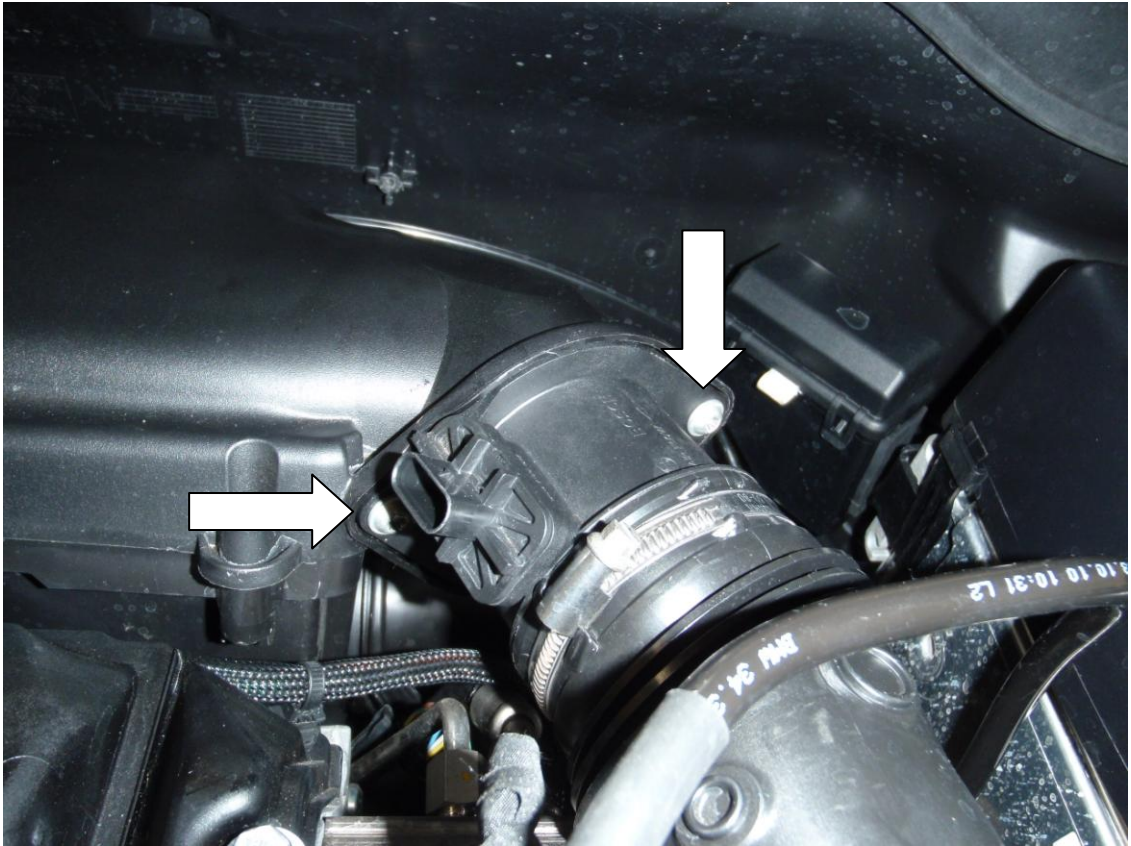


2. Undo the T25 Torx bolt holding the air filter down.




3. Now pull the air box upwards to release it from the rubber lugs.




4. Remove the cold air feed that connects to the bottom of the air box by simply twisting the pipe slightly and pulling outwards. Now the air box can be removed.

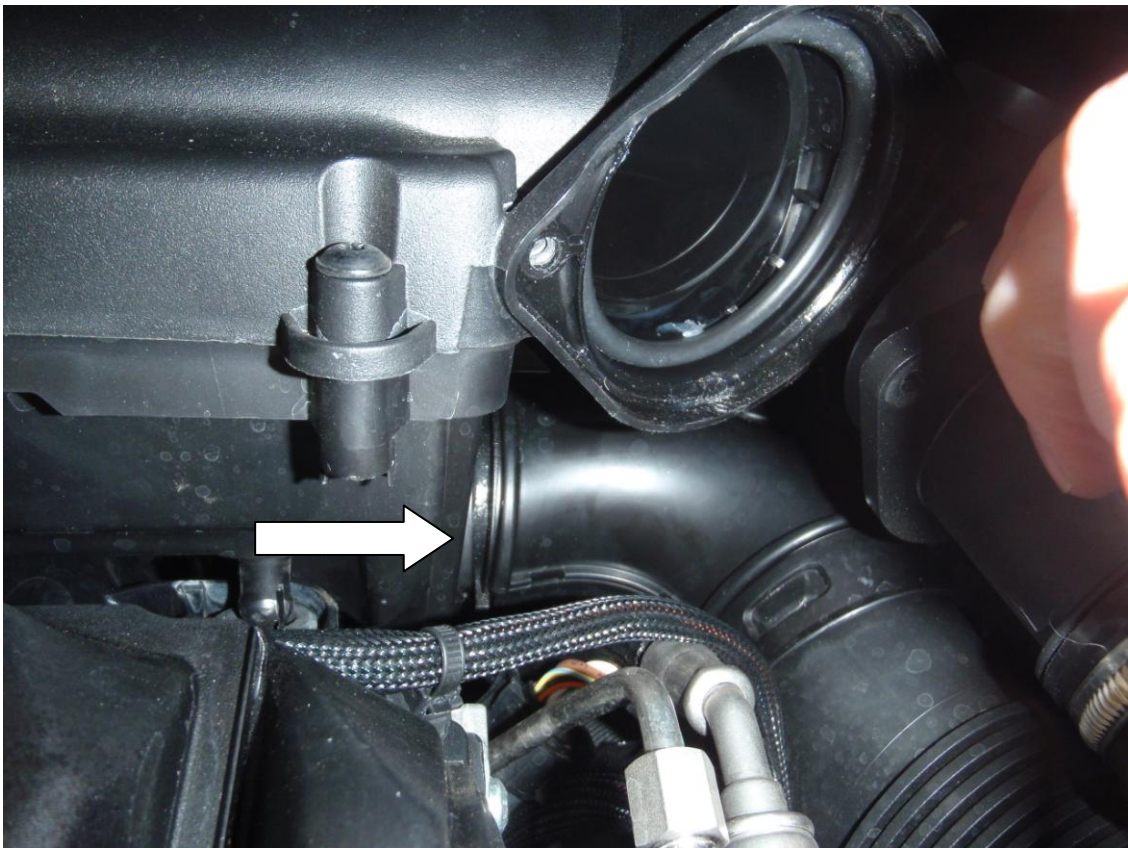

5. Fit the silicon hose reducer using the hose clips provided, to the air mass sensor.

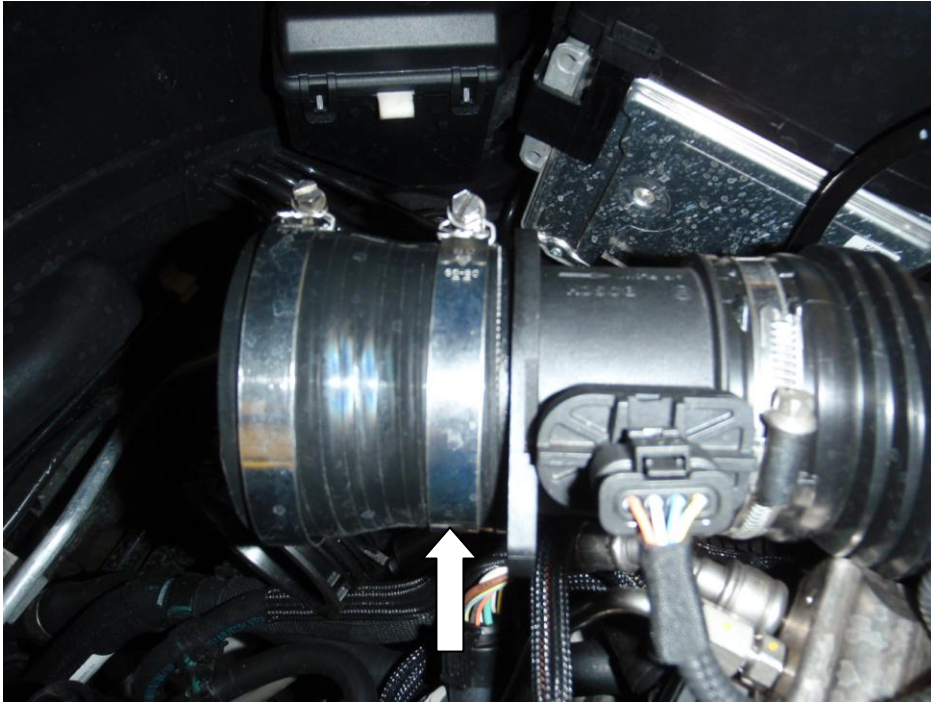

6. Fit the air filter to one end of the alloy pipe, and then the alloy pipe to the reducing silicon hose. Then using the self taper provided, screw that into the slam panel, tightening the 2 hose clamps.

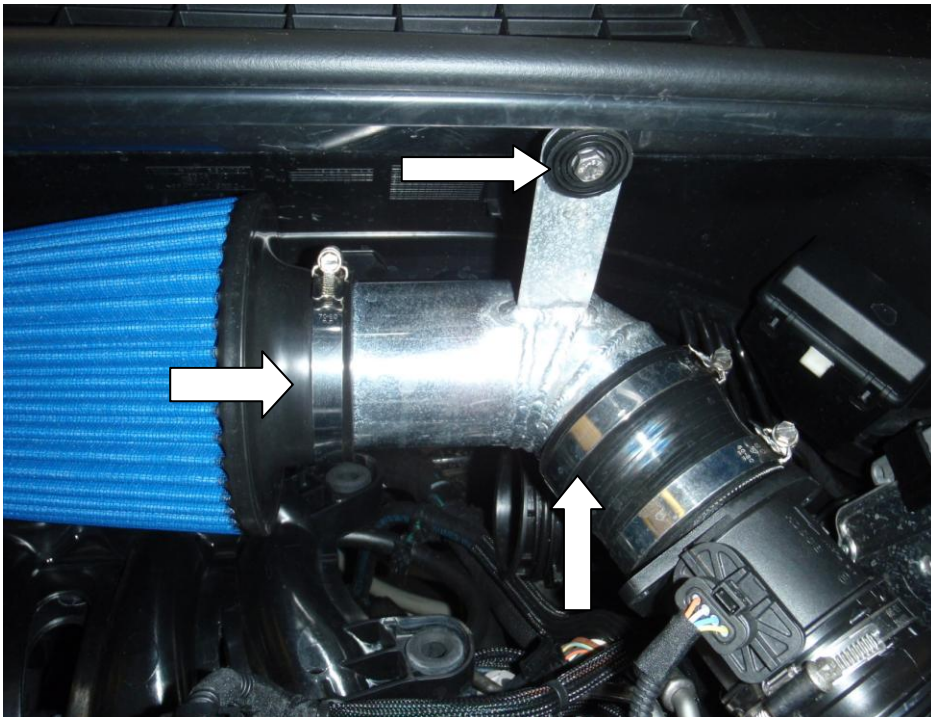

Installation is now complete.

Thank you for using Forge Motorsport products



ENGINEERED FOR PERFORMANCE