




Porsche 997 Gen 2 Atmo Valves

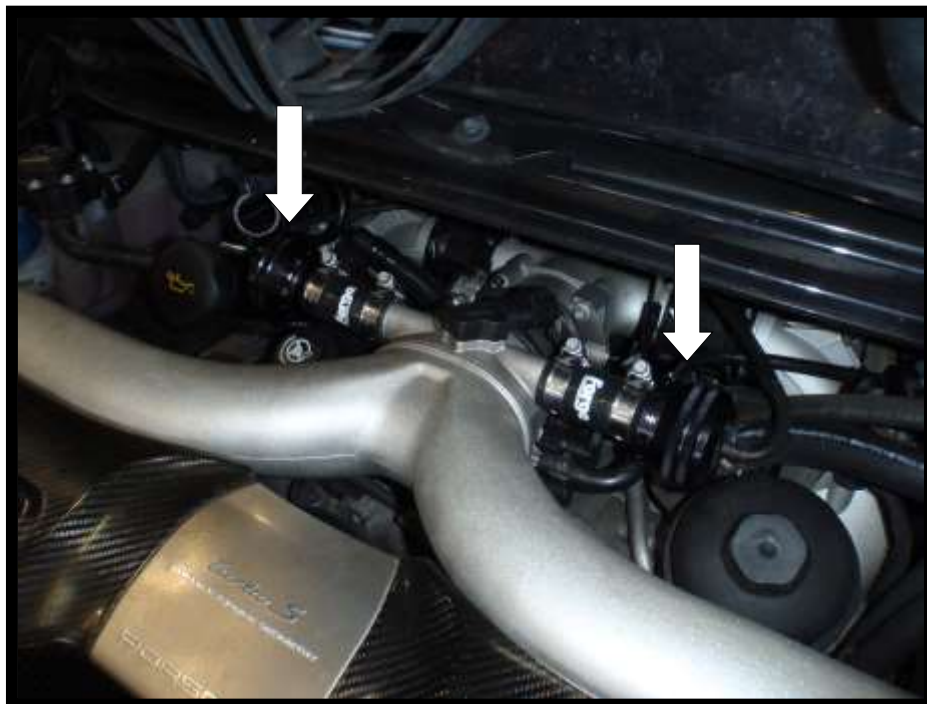

1. Remove the OEM valves and rubber hoses, using blanking plugs supplied in kit, blank off the holes in the intakes. Install the silicon hoses and dump valves to the Y pipe and your installation is complete.



ENGINEERED FOR PERFORMANCE