Toyota Corolla GR - FMINLD4 FITTING INSTRUCTIONS

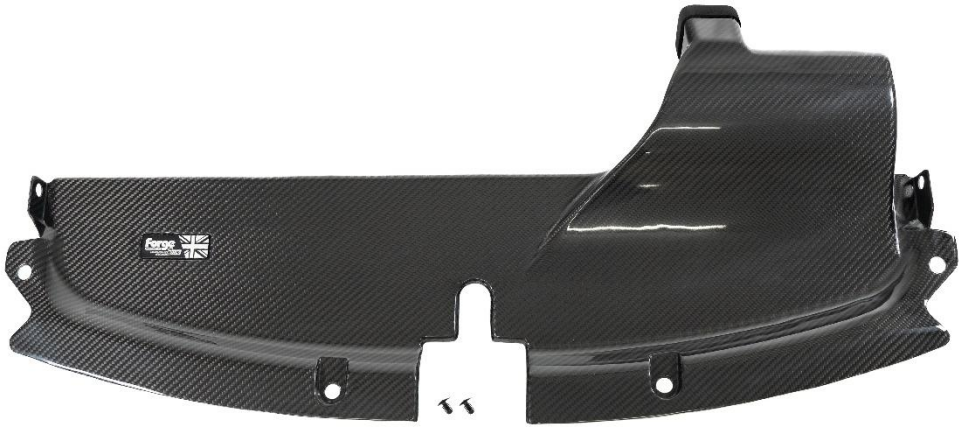

Please thoroughly read through and familiarise yourself with these instructions in their entirety prior to beginning any part of the installation process of any component. Please also ensure the vehicle and engine has cooled down sufficiently to avoid risking possible skin burns or other injury.

TOOLS NEEDED:

Flat blade screwdriver or trim tool

1. Open the bonnet and locate x7 plastic fasteners securing the slam panel to the crash structure. Using a flat blade screwdriver/trim tool release and remove the fasteners, this will allow you to remove the slam panel from the vehicle.

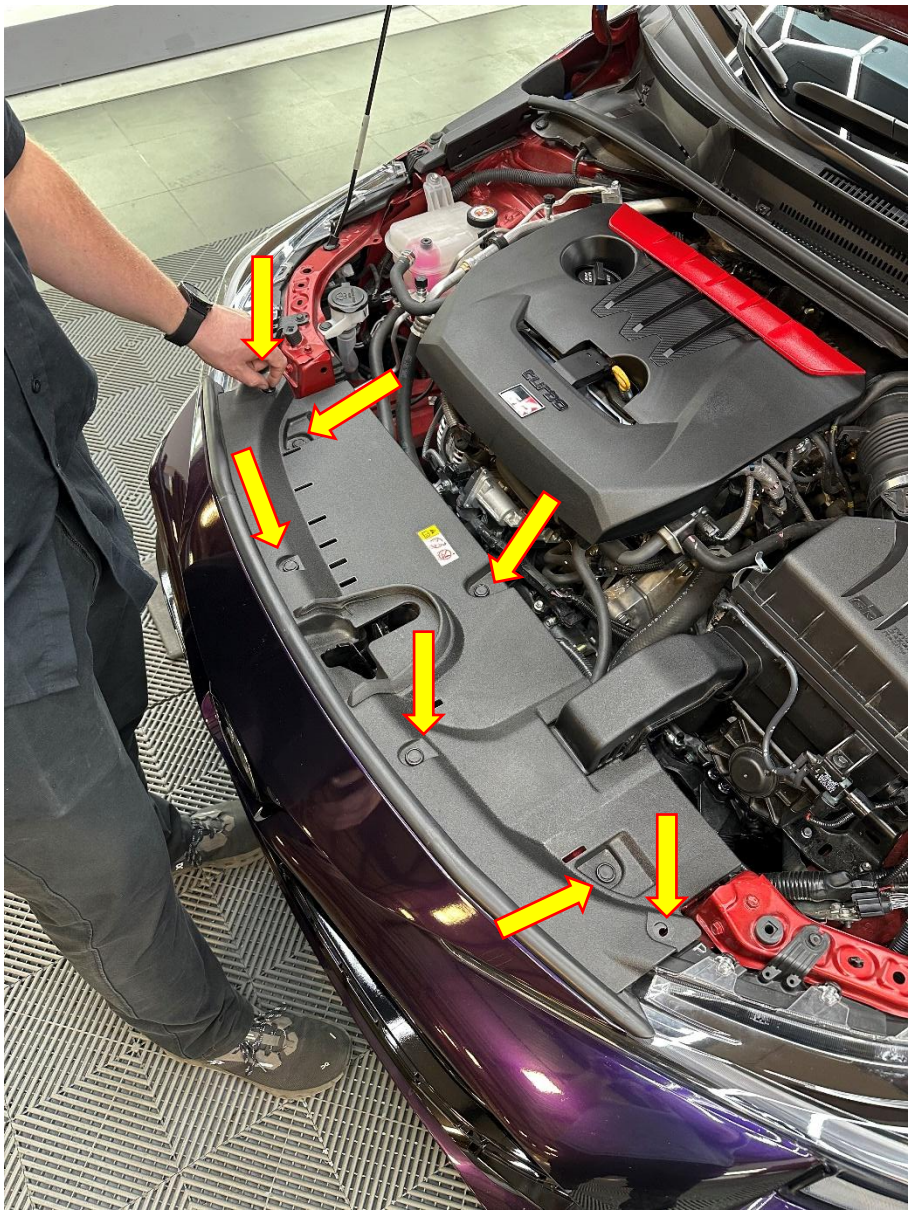

2. Using a flat blade screwdriver/trim tool release and remove the fasteners, this will allow you to remove both sections of the air duct from the vehicle.

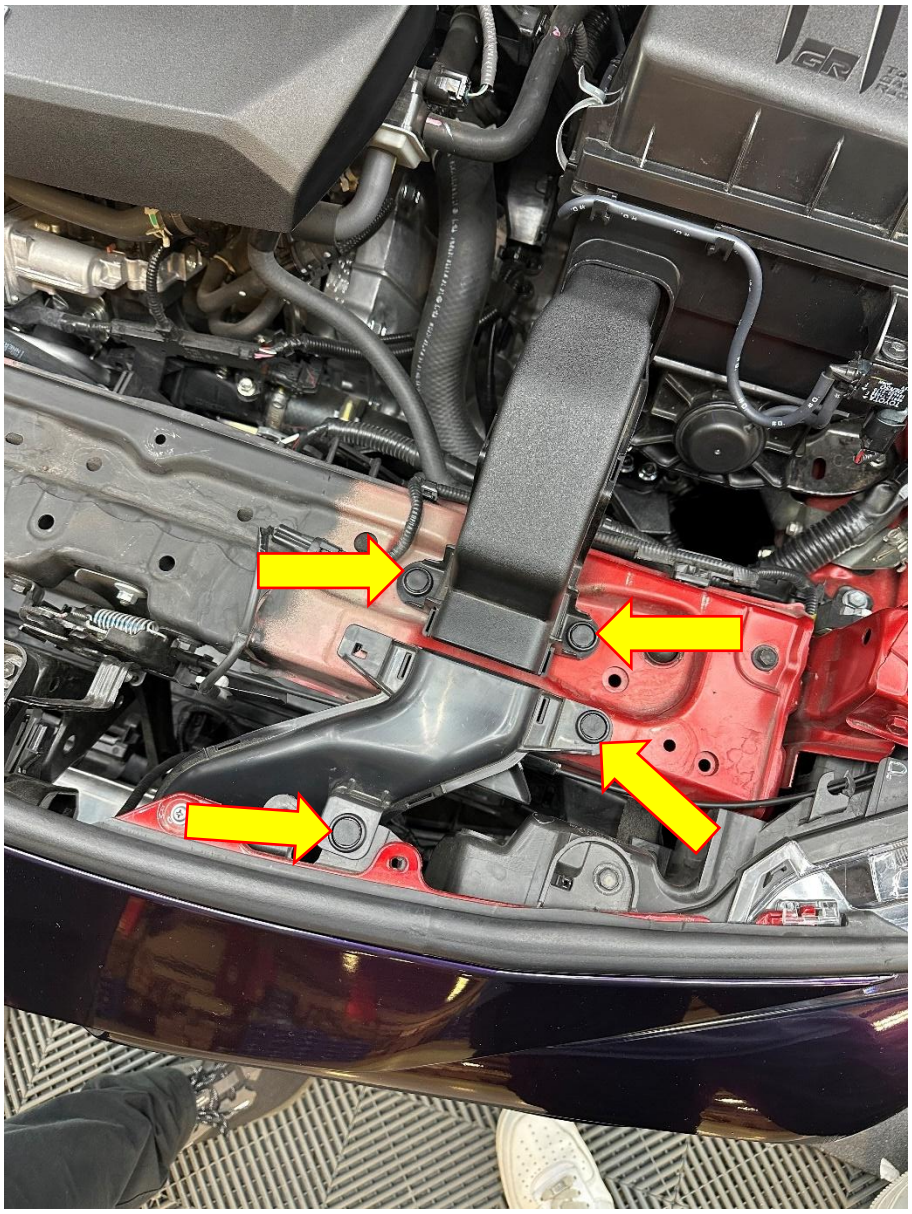

3. Insert the inlet duct into the square opening on the airbox and align the rest of the bolt holes.

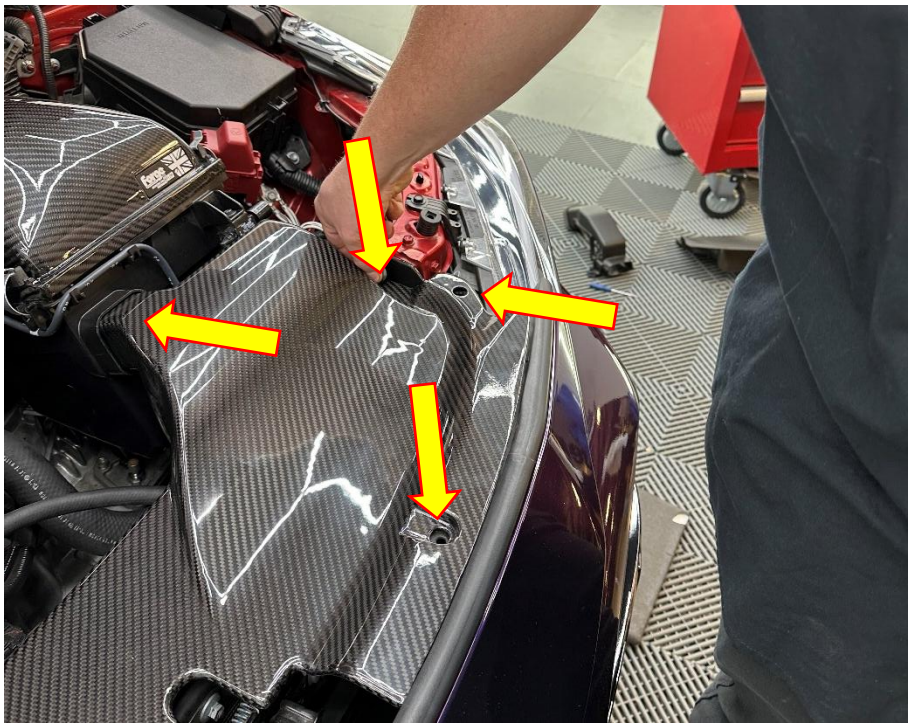

4. Take the supplied x2 firtree clips and press them into the horizontal holes through the Forge Motorsport inlet duct at either end.

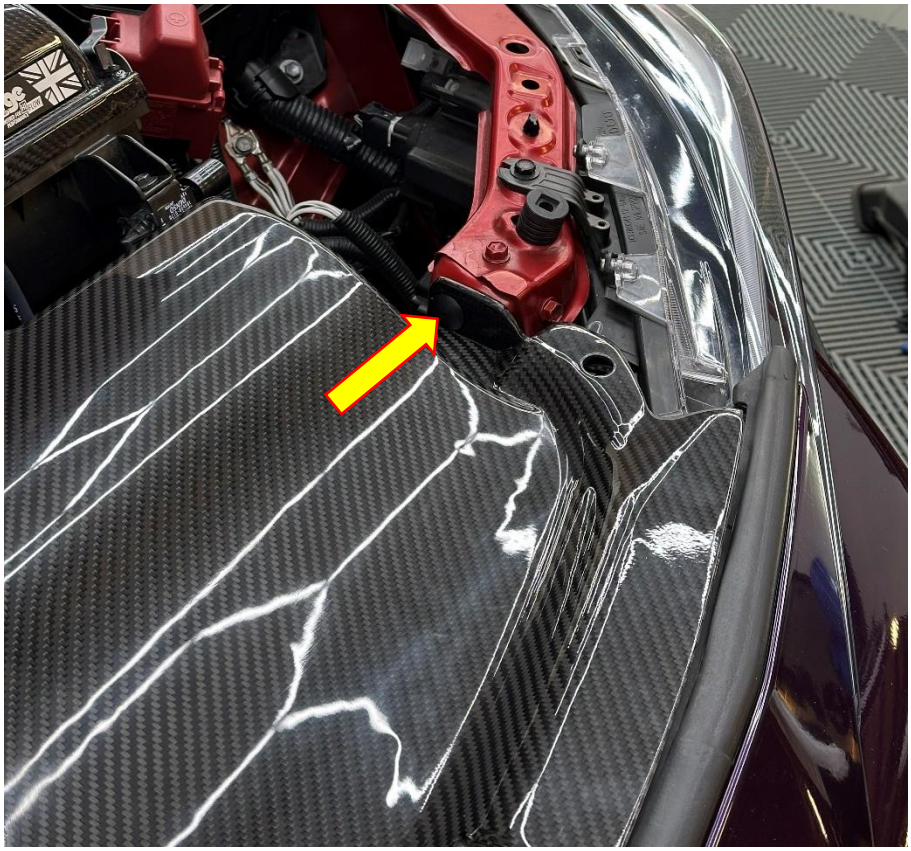

5. Use the original plastic fasteners that attached the OEM slam panel to the vehicle to attach the Forge Motorsport inlet duct

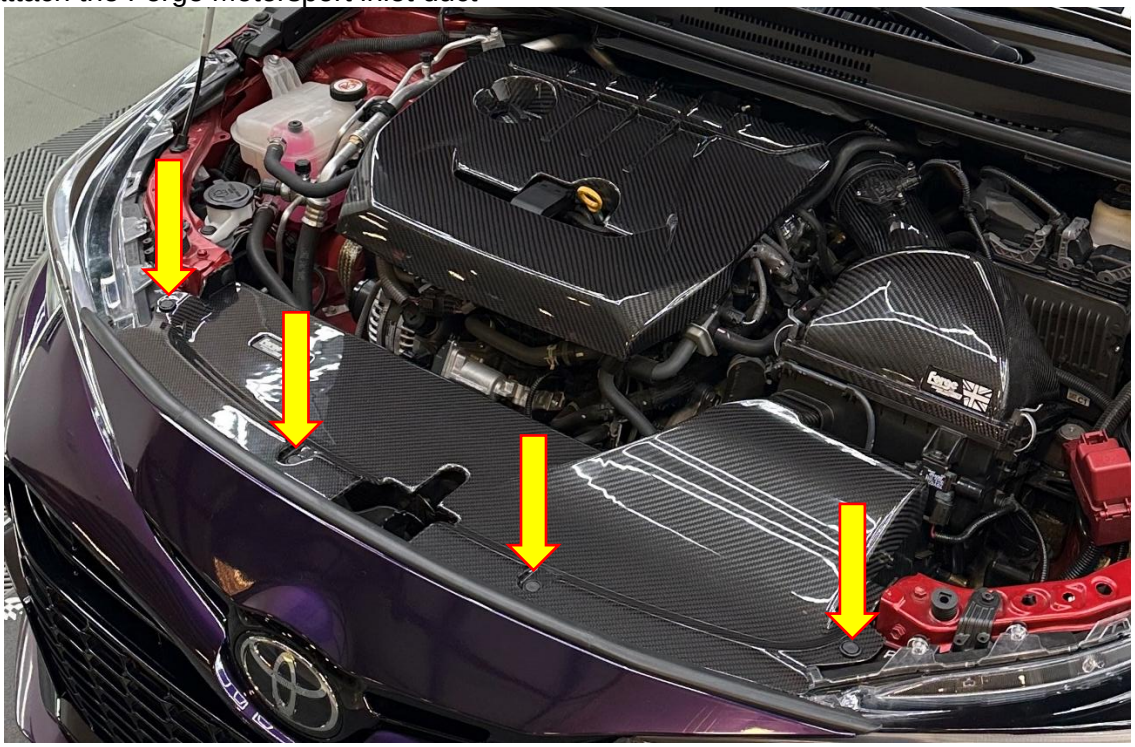

6. The installation for FMINLD4 is now complete, take your vehicle for a test drive and enjoy your new Forge Motorsport product.

Check out WWW.FORGEMOTORSPORT.CO.UK and WWW.FORGEMOTORSPORT.COM
For a full range of performance products for your vehicle.

If you have any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/Installer or you may contact us directly.

Forge Motorsport UK	(+44)1452 380999	info@forgemotorsport.co.uk
Forge Motorsport ASIA	+886-4-22516887	sales@forgemotorsport.asia

Forge Motorsport @forgemotorsport @forgemotorsport Forge Motorsport